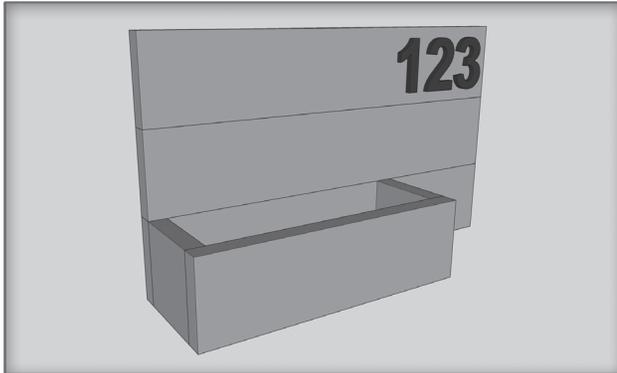


ADDRESS PLANTER BOX



MATERIALS

- 1x4 18" cedar (3) (back)
- 1x4 12" cedar (1) (front)
- 1x4 10½" cedar (1) (bottom)
- 1x4 3½" cedar (2) (sides)
- 1¼" stainless pocket screws (6)
- 1¼" stainless nails (12)
- Picture hanging D-ring hooks (2)
- ½" screws (2)
- 2½" house numbers **123**
- Stain

ASSEMBLY TOOLS

- Hammer
- Tape measure
- Pencil
- Drill
- Kreg jigs
- 12" clamps
- Nail gun
- Foam brush



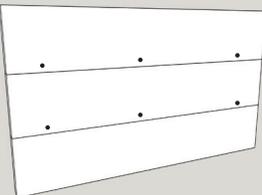
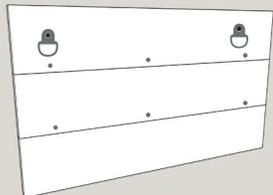
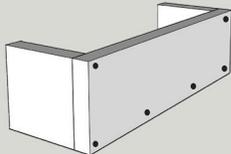
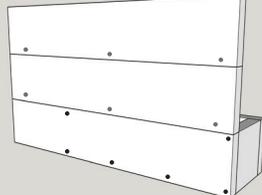
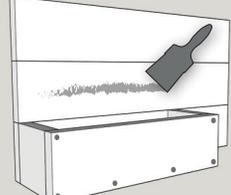





AND



www.enerstructa.com

	<p>STEP ONE </p> <p>Build the back panel by attaching the three 1x4 18" pieces with six 1¼" stainless pocket screws using a Kreg jig and the drill.</p>		<p>STEP TWO </p> <p>Add the two D-ring hooks to the upper part of the back panel using the two ½" screws.</p>		<p>STEP THREE </p> <p>Make the box by attaching the 1x4 12" front piece to the two 1x4 3½" side pieces and the 10½" bottom with six 1¼" stainless nails.</p>
	<p>STEP FOUR </p> <p>Use tape measure to mark the nail locations on the lower right back side; attach the box to the back panel with six 1¼" stainless nails.</p>		<p>STEP FIVE </p> <p>Stain the Address Planter Box the color of your choice using the foam brush and wood stain, or leave the wood bare if desired.</p>		<p>STEP SIX  123</p> <p>Install the house numbers using the screws included with the number kit and the drill.</p>
	<p>STEP SEVEN</p> <p>Add potting soil & plants to box; hang in desired location and enjoy!</p> <p>Tip: Different wall materials require different types of fasteners. Use fasteners suitable for your walls.</p>	<p>NOTES:</p> <hr/> <hr/> <hr/>			
