


ADDRESS PLANTER BOX

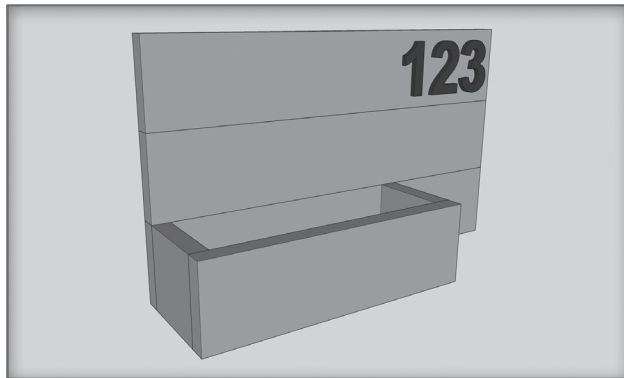

MATERIALS

- 1x4 18" cedar (3) (back)
- 1x4 12" cedar (1) (front)
- 1x4 10½" cedar (1) (bottom)
- 1x4 3½" cedar (2) (sides)
- 1¼" stainless pocket screws (6)
- 1¼" stainless nails (12)
- Picture hanging D-ring hooks (2)
- ½" screws (2)
- 2½" house numbers **123**
- Stain

ASSEMBLY TOOLS

- Hammer
- Tape measure
- Pencil
- Drill
- Kreg jigs
- 12" clamps
- Nail gun
- Foam brush











AND




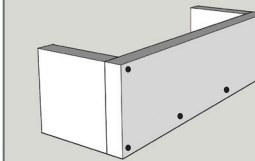
www.enerstructa.com

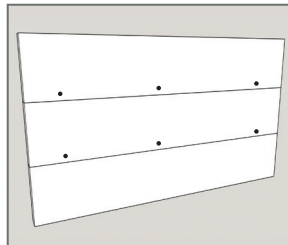


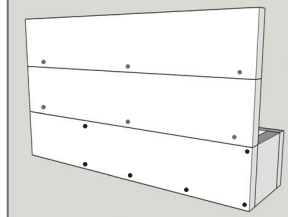
STEP ONE 
 Build the back panel by attaching the three 1x4 18" pieces with six 1¼" stainless pocket screws using a Kreg jig and the drill.

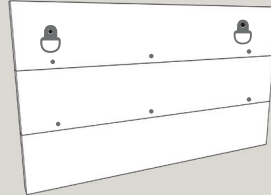


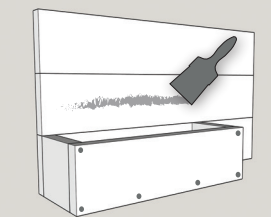
STEP TWO 
 Add the two D-ring hooks to the upper part of the back panel using the two ½" screws.




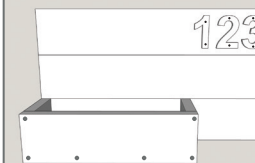
STEP THREE 
 Make the box by attaching the 1x4 12" front piece to the two 1x4 3½" side pieces and the 10½" bottom with six 1¼" stainless nails.




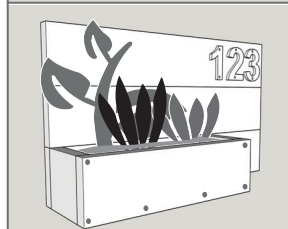
STEP FOUR 
 Use tape measure to mark the nail locations on the lower right back side; attach the box to the back panel with six 1¼" stainless nails.



STEP FIVE 
 Stain the Address Planter Box the color of your choice using the foam brush and wood stain, or leave the wood bare if desired.



STEP SIX 
 Install the house numbers using the screws included with the number kit and the drill.



STEP SEVEN
 Add potting soil & plants to box; hang in desired location and enjoy!
 Tip: Different wall materials require different types of fasteners. Use fasteners suitable for your walls.

NOTES:
